

IC-7000 DTMF Memory Programming

- ① Push [MODE] to select FM mode.
- ② Select S-1.
 - Hold down [MENU/GRP] for 1 second once or twice to select the menu group S.
 - Push [MENU/GRP] momentarily one or more times to select the menu S-1.
- ③ Push [F-2 DTM] then [▼(MENU/GRP)] to select the DTMF root menu.
 - If the DTMF root menu appears, skip pushing [▼(MENU/GRP)]. The DTMF starting menu can be changed in the miscellaneous (others) Set mode. (see p. 134)
- ④ Push [F-2 EDT] to enter the DTMF edit menu.
- ⑤ Push [F-1 D1] — [F-4 D4] to select the desired DTMF memory channel.
- ⑥ Select the desired code by rotating [DIAL].
 - Push [F-1 ←] or [F-2 →] for cursor movement.
 - Push [F-3 DEL] to delete the selected code.
- ⑦ Repeat steps ⑤ and ⑥ until the desired contents are input.
- ⑧ Push [▼(MENU/GRP)] to return to memory channel selection mode, then select the next memory channel and repeat steps ⑤ and ⑦ for code input, if desired.
- ⑨ Push [▼(MENU/GRP)] twice to exit the keyer edit mode.

