



*This circuit allows a non-Icom transmitter to be used in conjunction with a Icom random wire Automatic Antenna Tuner such as the AH-3, AH-4, AT-120, and the AT-130.*

### Operating Procedure

*These tuners are designed to automatically tune with 5 to 15 watts of rf energy. DO NOT EXCEED THIS or damage will result.*

- 1) Be sure power supply is "ON" and all cables connected correctly*
- 2) Before connecting the rf output coax cable to the tuner, set your transmitter to CW mode, then adjust power out to 10 watts; then reconnect your coax to the tuner.*
- 3) Momentarily push the "START" switch*

*Note: The LED will go out when the start button is pressed and come back "ON" in a few seconds if the tuner can tune your antenna*

**MASTER**  
Do Not Remove  
From Tech Support Area