



Icom America, Inc.
2380 116th Ave NE
Bellevue, WA 98004
425.454.7619

IC-V80 Memory Channel Programming

Entering Frequency, Offset, and Tone

1. Verify that the radio is in VFO mode. If not, press and hold the VFO/MR/CALL key several times (if necessary). VFO mode follows WX mode.
2. Set the frequency you want to use by pressing the numbers on the keypad.
3. To set your offset or duplex, press the FUNC/* key then the DUP/4 key. Repeat until you see a – or + on the left of the Display.
4. To access Repeater Tones (rt), press FUNC/* then SET/8. Press the Up or Down arrows to select **rt** on the display. Rotate the Volume Knob to select a tone.
5. Press #/ENT to exit the Set Mode and set the tone you selected. Press FUNC/* then TONE/1 several times (if necessary) until you see a musical note in the left side of the Display.

Saving Settings in a Memory Channel

6. Press FUNC then VFO/MR/CALL. You will see **MR** flashing in the Display.
7. Press the Up or Down arrows to select a memory channel to assign your settings. If you use a memory that already contains a frequency, this frequency will be overwritten by the new frequency.
8. Press FUNC then *press and hold* VFO/MR/CALL. You will hear one beep followed by two short beeps.
9. To verify a channel in memory mode, press the VFO/MR/CALL key until you see **MR** in the left side of the Display. Use the Up or Down arrows to select the desired memory channel.