

A14 Memory Channel Programming

Note: be sure the volume is turned up before you begin.

1. Press the CLR button to ensure that the radio is ready for programming.
2. Type the frequency that you want to save into memory.
3. Press the FUNC key and quickly, while "F" shows on the upper left of the Display, press the MR/MW button. The "Mch" indicator will begin to flash on and off.
4. Use the Up or the Down arrow keys to select a memory channel to save this frequency. You will see the display briefly show the channel number and then it will disappear.
5. Press the Ent/Set key and you will hear two short beeps. The "Mch" indicator will disappear, indicating that you have successfully programmed this frequency into your selected memory channel.
6. Verify that the frequency is programmed by momentarily pressing the MR/MW button. The "Mch" indicator will appear, a channel number will appear briefly, and the frequency that you have programmed will appear and stay on the display.
7. To program another frequency into a different memory channel, begin at step 1 and follow the instructions through step 6.