



ID-880 Memory Channel Programming: FM Mode


1. Press the VFO/MHz key to select VFO mode.
2. Press BAND/MODE (center of Tuning Dial) then rotate the Tuning Dial to select the frequency band.
3. Press BAND/MODE to return to frequency indication in the selected frequency band.
4. Press and hold BAND/MODE for 1 sec., then rotate the Tuning Dial to select the desired operating mode (**FM**, **FMN**, **AM**, **NAM** and **DV**).
5. Press BAND/MODE again to return to the frequency indication display.

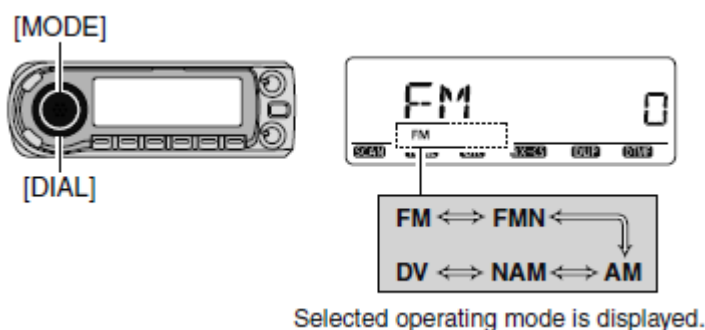


6. Rotate the Tuning Dial to set the frequency.
7. To change the frequency in 10 MHz (or 1 MHz) steps, press VFO/MHz once or twice, then rotate the Tuning Dial.
8. Press VFO/MHz again.

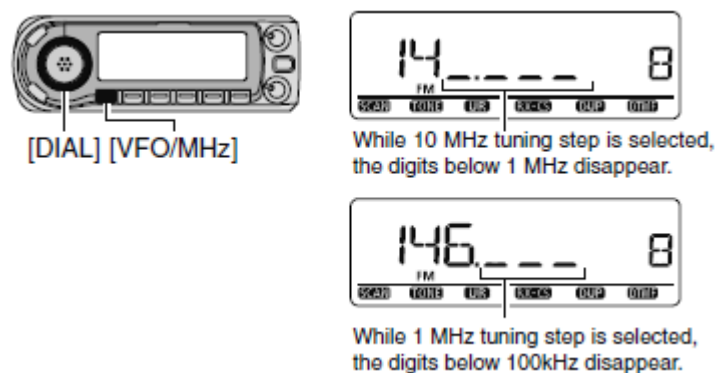

9. Press and hold the **DUP/LOW** key for 1 sec. then rotate the Tuning Dial to select minus duplex or plus duplex.
10. Press **DUP/LOW** again.

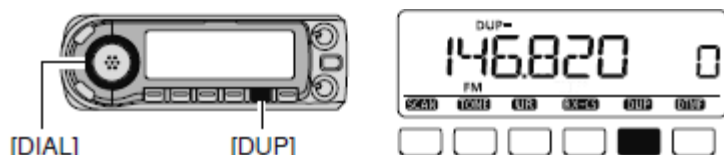

11. Press and hold **TONE/M/CALL** for 1 sec. then rotate the Tuning Dial and select **TONE**.
If the repeater requires a subaudible tone, press **TONE/M/CALL** again.
12. Press MENU, rotate the Tuning Dial to select **DUP.T**, and then press MONI.
13. Rotate the Tuning Dial to select **R TONE**, and then press MONI.
14. Rotate the Tuning Dial to select and set the desired subaudible frequency, then press MONI.
15. Press MENU again to exit the **DUP.T** menu.
16. Press S.MW, and then rotate the Tuning Dial to select the desired memory channel. The **MR** indicator and memory channel number will blink.

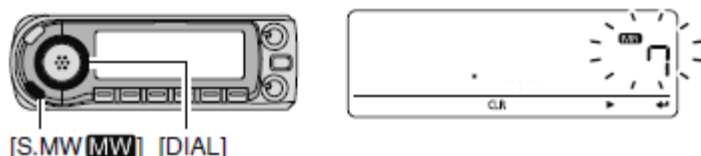

17. Press and hold S.MW for 1 sec. to set the channel in memory; three beeps will sound. The radio returns to VFO mode automatically after programming.

The memory channel number automatically increments when continuing to press S.MW after programming.