

ID-51A Memory Channel Programming

1. Press the V/MHz key to set your radio to VFO mode.
2. Press the MODE key to select FM operation.

Set the Duplex (offset)

1. Momentarily press the QUICK key.
2. Use the Navigator Pad (center of Front Panel) to highlight **DUP**.
3. Press the center key to select **DUP**.
4. Use the Navigator Pad to select – or +.
5. Press the Center key to enter the Dup value.

Enable the Tone Encoder

1. Momentarily press the QUICK key.
2. Use the Navigator Pad to highlight **TONE**.
3. Press the center key to select **TONE**.
4. Use the Navigator Pad to highlight **TONE** again from the next list.
5. Press the center key to enable the **TONE encoder**.

Set the Repeater Tone

1. Momentarily press the MENU key.
2. Use the Navigator Pad to highlight **DUP/TONE**.
3. Press the center key to select **DUP/TONE**.
4. Use the Navigator Pad to highlight **Repeater Tone**.
5. Press the center key to select **Repeater TONE**.
6. Rotate the Tuning Dial to select your repeater tone.
7. Press the center key to set the repeater tone.
8. Momentarily press the MENU key to return to VFO mode.

Saving Your Settings in a Memory Channel

1. Press and Hold S.MW until you hear 2 beeps.
2. Rotate the Tuning Dial to select an empty memory channel. The memory channel display will flash.
3. Press and hold S.MW until you hear 1 short beep followed by 2 short beeps.
4. To access the programmed memory channels, momentarily press S.MW.