

A-14 Bank Programming Instructions

The A-14 radio allows *direct* programming of a frequency into a Bank. These instructions are similar to Memory Channel Programming but with additional steps.

1. Press the CLR key to ensure that the radio is ready for programming.
2. Type the frequency you want to save into memory.
3. Press the FUNC key and quickly, while the "F" is shown in the upper left of the Display, press the MR/MW key. The **Mch** indicator will flash on and off.
4. Press the FUNC key again and press the Bank key. A Bank number will appear.
5. Use the Up or Down arrow keys to select the Bank into which you wish to save this frequency.
6. Press the ENT key to save the frequency into the Bank.

To verify your programming

1. Press the MR/MW key to enter the memory section of the radio.
2. Press FUNC and then Bank. A Bank number will appear.
3. Press the ENT key.
4. A channel number will appear and then change to the frequency that you have programmed.

If you have programmed more than one channel into a single bank, use the Up or Down arrow keys to scroll through these channels.