

ID-5100 Memory Channel Programming

1. On the Touch Screen, press **V/M** to enter VFO mode (there will be no **MR** icon in the lower right of the Display).
2. Set a frequency with the Tuning Dial.
3. Press **F1** twice to select **F3**.
4. Press **DUP**, then press the desired duplex offset. In the upper right the selected **DUP** will appear.
5. Press **Tone**.
6. Press the MENU button.
7. Press **DUP/TONE**.
8. Press **Repeater Tone**. Rotate the right-hand dial to select a tone, or you can press – or + on the Display.
9. Press the “go back” icon in the lower right of the Display three times to go back to the main VFO screen.
10. Press the F3 icon to return to the F1 Menu.
11. Press **MW** to enter **Memory Write** mode.
12. Press **Write to New CH**.
13. Press **CH SEL**.
14. Rotate the right-hand Dial to select a channel, or you can press – or + on the Display.
15. Press the selected channel.
16. Press **WRITE**. **Write to a blank channel?** will appear, tap **YES**. You will hear two rapid beeps.

To check the information in a memory channel:

1. Press **MW**.
2. Press **Manage Memory**.
3. Press **Memory CH**.
4. Press **ALL**.
5. Select the desired memory channel and the memory parameters will display.

3. Press **MW**.
4. Press **Write to New CH**.
5. Press **CH SEL**.
6. Use the Tuning Dial to select an open channel and press that channel.
7. Press **WRITE**.
8. When the pop-up window says **Write to blank channel?**, press **YES**. You will hear two rapid beeps.