

IC-7610: Removing the Tuning Knob

1. Remove the rubber knob sleeve (P/N 8110011190) with a plastic or non-marring tool.



2. Locate the set screw (P/N 8810003560) in the knob and insert a 2mm flat end Allen Wrench (not ball-end) and turn CCW.



3. Pull the knob (P/N 8610016321) straight out.