

A16 Frequency Programming

1. Press CLR/HOME to exit the Memory mode and enter VFO mode.
2. Press ▲ or ▼ (or the keypad) to set the frequency.
3. Press FUNC, then MR/MW to enter the Memory Write mode. ****MCH** blinks on the Display.
4. Press ▲ or ▼ to select a channel to enter the frequency. The group and channel will appear for 1 second; if the channel is blank, the channel will show nothing. If there is a frequency in the selected channel, it will appear, so press ▲ or ▼ to select a blank channel otherwise you will overwrite the original frequency.
5. Press ENT/SET to enter the frequency into the selected memory channel. The radio will automatically return to VFO mode.
6. To go to a memory channel, press MR/MW, then ▲ or ▼ to select the desired channel.
7. Press ENT/SET to set the radio to that memory channel.

Note: to change the selected group: Press FUNC, then press GRP. Press ▲ or ▼ to select a group then press ENT/SET to set the group.