



Using M506 Softkeys

The M506 has a number of features that are accessed by using the row of keys under the Display. These keys have different functions, depending on which are selected from the Display.

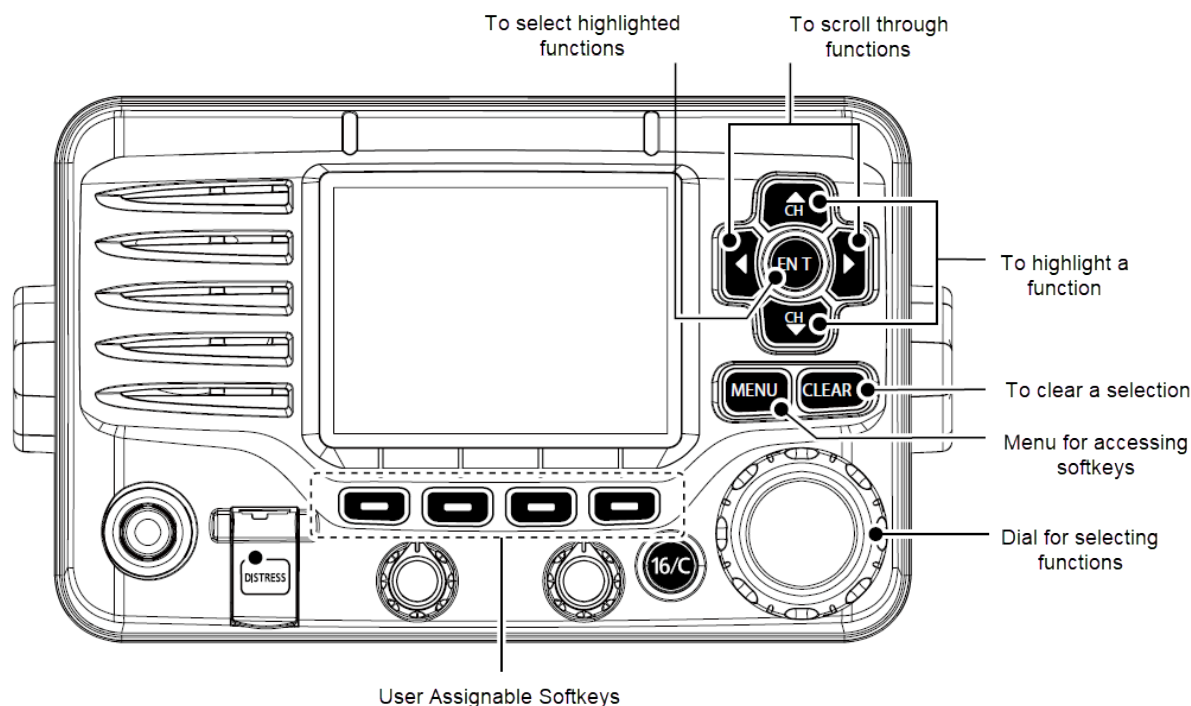

To Assign a Function to a Softkey

1. Press MENU.
2. Press the softkey below **CONFIG**. If **CONFIG** is not on the Display, press the left and right arrow keys until **CONFIG** appears.

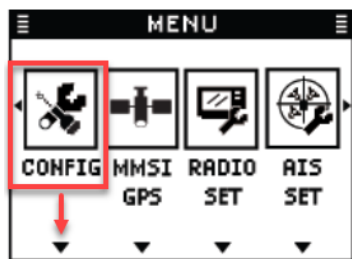

3. Rotate the Dial or press the Up/Down keys to highlight **Key Assignment**, then press ENT.
4. Rotate the Dial or press the Up/Down keys to highlight a Softkey that shows **Not Used**, then press ENT.
5. Rotate the Dial or press the Up/Down keys to highlight the selected function, then press ENT. A check mark will appear to the left of the selected function.
6. Press the key below **EXIT** (on the Display). The Softkey should now appear in the list when using the Left and Right keys.