

IC-7610 Speaker and Headphone Activation Matrix

The following table describes how the external speakers and headphones work in Single Watch and Dual Watch operation.

These values are based on firmware version 1.2. Icom reserves the right to change without notice.

External Speaker / Headphone Connected	RX Single Watch	RX Dual Watch
Ex. SP1	Main Only	Both Main + Sub
Ex. SP2	No audio at SP2 <i>and</i> Internal speaker	Internal Speaker (Main), SP2 (Sub)
Ex. SP1+ Ex. SP2	SP1 (Main) active	SP1 (Main), SP2 (Sub) active
HP (L/R Mix = Off)*	Main on both	Left = Main, Right = Sub
HP (L/R Mix = On)*	Main on both	Main and Sub mixed on both left and right

*Note: When headphones are connected, all external speakers and the internal speaker are disabled.