

V10MR: Programming the Emergency Feature Using DTMF

The following procedure applies to both the User and Dealer software.

1. In the main menu of the CS-V10MR software, click **Mode > Full**.
2. To program the Emergency feature, you will need to select a specific channel. This procedure uses channel 2, though any channel can be selected.
3. In the Memory CH screen, click the **Atr** field next to channel 2 and select **Emergency**.
4. Go to **Signaling** for that channel and select **DTMF** in the **Log-out** and **Emg-out** fields.
5. Go to the **DTMF** folder.
6. In **DTMF Autodial**, enter your desired DTMF tones in the **Code** field next to **Emergency**. These are the tones that will be transmitted to activate the emergency feature.
7. Go to the **Emergency** folder.
8. In **Repeat Cycle**, enter the number of times (cycles) you want the emergency signal transmitted. You can select from 1 cycle to infinite.
9. Go to the **Common** Folder.
10. In **Key & Display > Key > Top**. Select **Emergency** to assign the Top key (red) as the emergency key.
11. Click **Program > Write** in the top menu.

To Use

Press and hold the red Top button. You will hear an initial beep and then it will be followed shortly by a short double-beep.

Next, you will hear a series of single beeps indicating that the Emergency transmission is ready to send. At the end of these beeps, the radio will transmit the tones you selected for the number of times you selected in the Repeat Cycle area.

In case emergency was enabled by accident, quickly press and release the Red button to stop the sequence.